

# Exploded View

## MZ Starting Motor

### Assemblies

No.	Description	Part No.	MZ-4203	MZ-4204	MZ-4205	MZ-4206	MZ-4207	MZ-4208	MZ-4214	MZ-4216	MZ-4217	MZ-4218	MZ-4219	MZ-4220	MZ-4221	MZ-4222	MZ-4223	MZ-4224	MZ-4225	MZ-4226		
1	Armature	MZ-2383	•																			
		MZ-2386		•																		
		MZ-2399			•	•	•	•			•	•	•	•	•	•	•	•	•	•	•	•
		MZ-2412								•												
2	Brush Set	MZ-2012AS	•																			
		MBG-2012S		•	•	•	•	•			•	•	•	•	•	•	•	•	•	•	•	•
		MBG-2012CS								•												
3	Field Coil Assy.	MZ-1005AS	•																			
4	Frame & Field Assy.	MZ-2385S		•																		
		MZ-2397S			•	•	•	•			•	•	•	•	•	•	•	•	•	•	•	•
		MZ-2022DS								•												
5	Comm. End Head Assy.	MZ-2002F	•																			
		MZ-2002U		•																		
		MZ-2400			•	•	•	•			•	•	•	•	•	•	•	•	•	•	•	•
		MZ-202VS								•												
6	CE Bearing	X-3991			•	•	•	•		•	•	•	•	•	•	•	•	•	•	•	•	
7	DE Head or Pinion Housing	MZ-1147	•																			
		PS-1435		•																		
		(a)			•																	
		(b)				•				•												
		(c)						•														
		MZ-2413(d)								•												
		PS-2432B										•			•							•
		PS-1432C											•		•			•				
		PS-1437B												•				•				
PS-1432F																			•			
8	DE Bearing	MZ-46A	•																			
		MG-77A		•																		
		(a)			•																	
		(b)				•					•											
		(c)						•														
		90-2018(e)								•												
MZ-298										•	•	•	•	•	•	•	•	•	•	•		
9	Bendix Drive	EBB-133(f)	•																			
		EBB-124A(f)		•																		
		EBB-75A(g)			•	•	•					•	•	•								
		(h)								•												
		EBB-142A(g)									•				•							
		EBB-131A(f)														•	•	•	•	•	•	•



